
PRODUCT No. 23700

ASAHI PENTAX KX

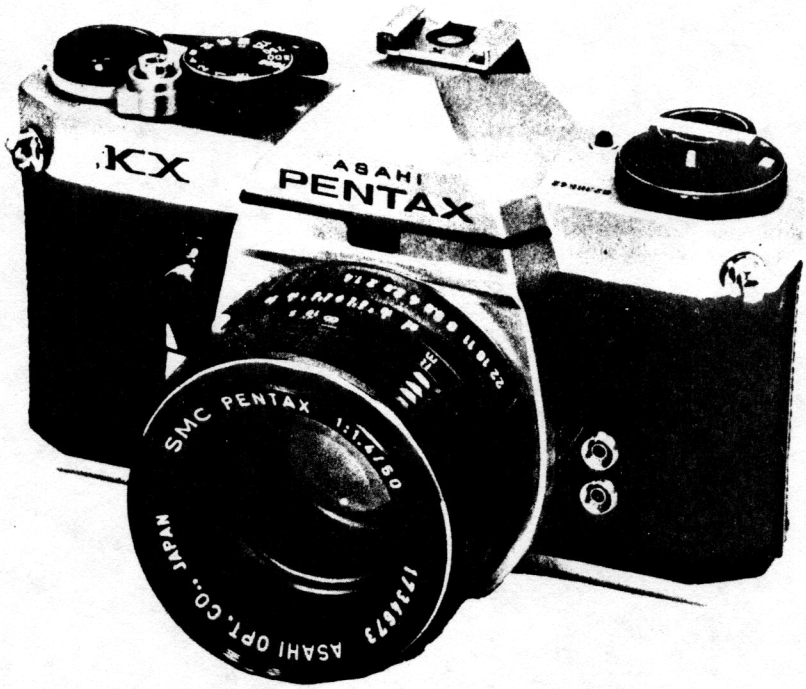

06:75:3H

Product No. 23700
ASAHI PENTAX KX


CORRECTION

Page	Parts No.	Description	Quantity	Interchangeability
2/24	0-A103	Cover frame assembly (A103, A160, A161, L7, L11)	1	
6/24	0-A501	Shutter rod assembly (A501, A502, A504, A611)	1	
10/24	0-C201	Bottom mec. plate assembly (C201, C202, C203, C204, C205, C207 x2, C208, C209, C210)	1	23110-0-C2
11/24	C306 (A∼C)	Wind lever retainer plate (A 0.4mm B 0.5mm C 0.6mm)	1	
12/24	0-D10	Shaft receptacle assembly (D10, D11, D16, D29, D30)	1	
13/24	E38	Curtain shaft collar E	1	23110-E169
	0-E41	Bottom shaft rest assembly (E41, E42, E43, E44)	1	23110-0-E3
16/24	0-E409	Pallet release rod assembly (E409, E405, E407, E410)	1	23110-0-F9
17/24	J500	Electro parts (J500, J202 x2, J300)	1	
	0-J601	Synchro terminal assembly (J601∼J603)	2	23602-0-A340
18/24	0-L4	Pentaprism assembly (L4, L9, L10, M8, M11, M13, M23, M24)	1	

DELECTED

16/24	E405	Pallet release lever top A	1	23110-F5
	E410	Pallet rease lever collar	1	23110-F10

EXPLODED ILLUSTRATION

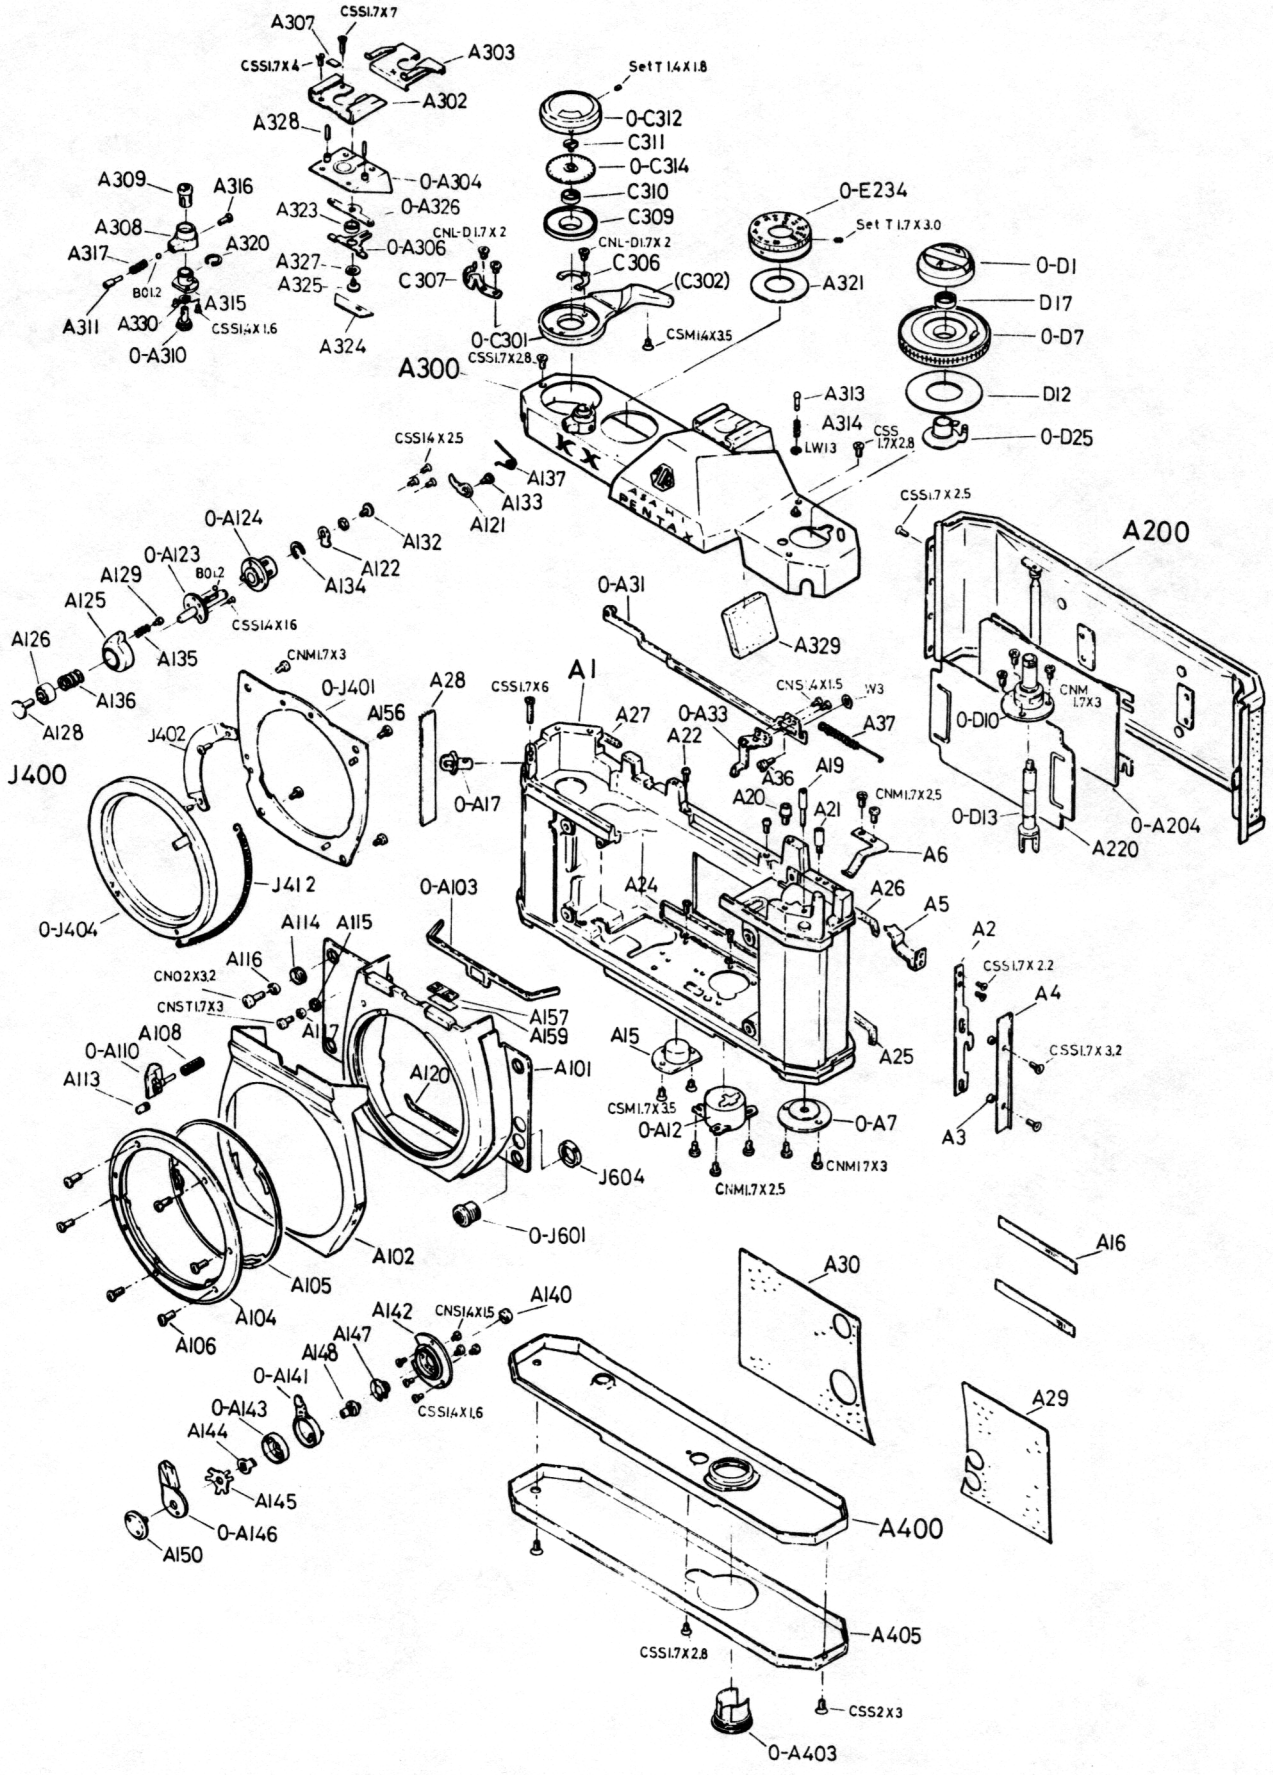

Product No. 23700

ASAHI PENTAX KX

Fig. 1

EXPLODED ILLUSTRATION


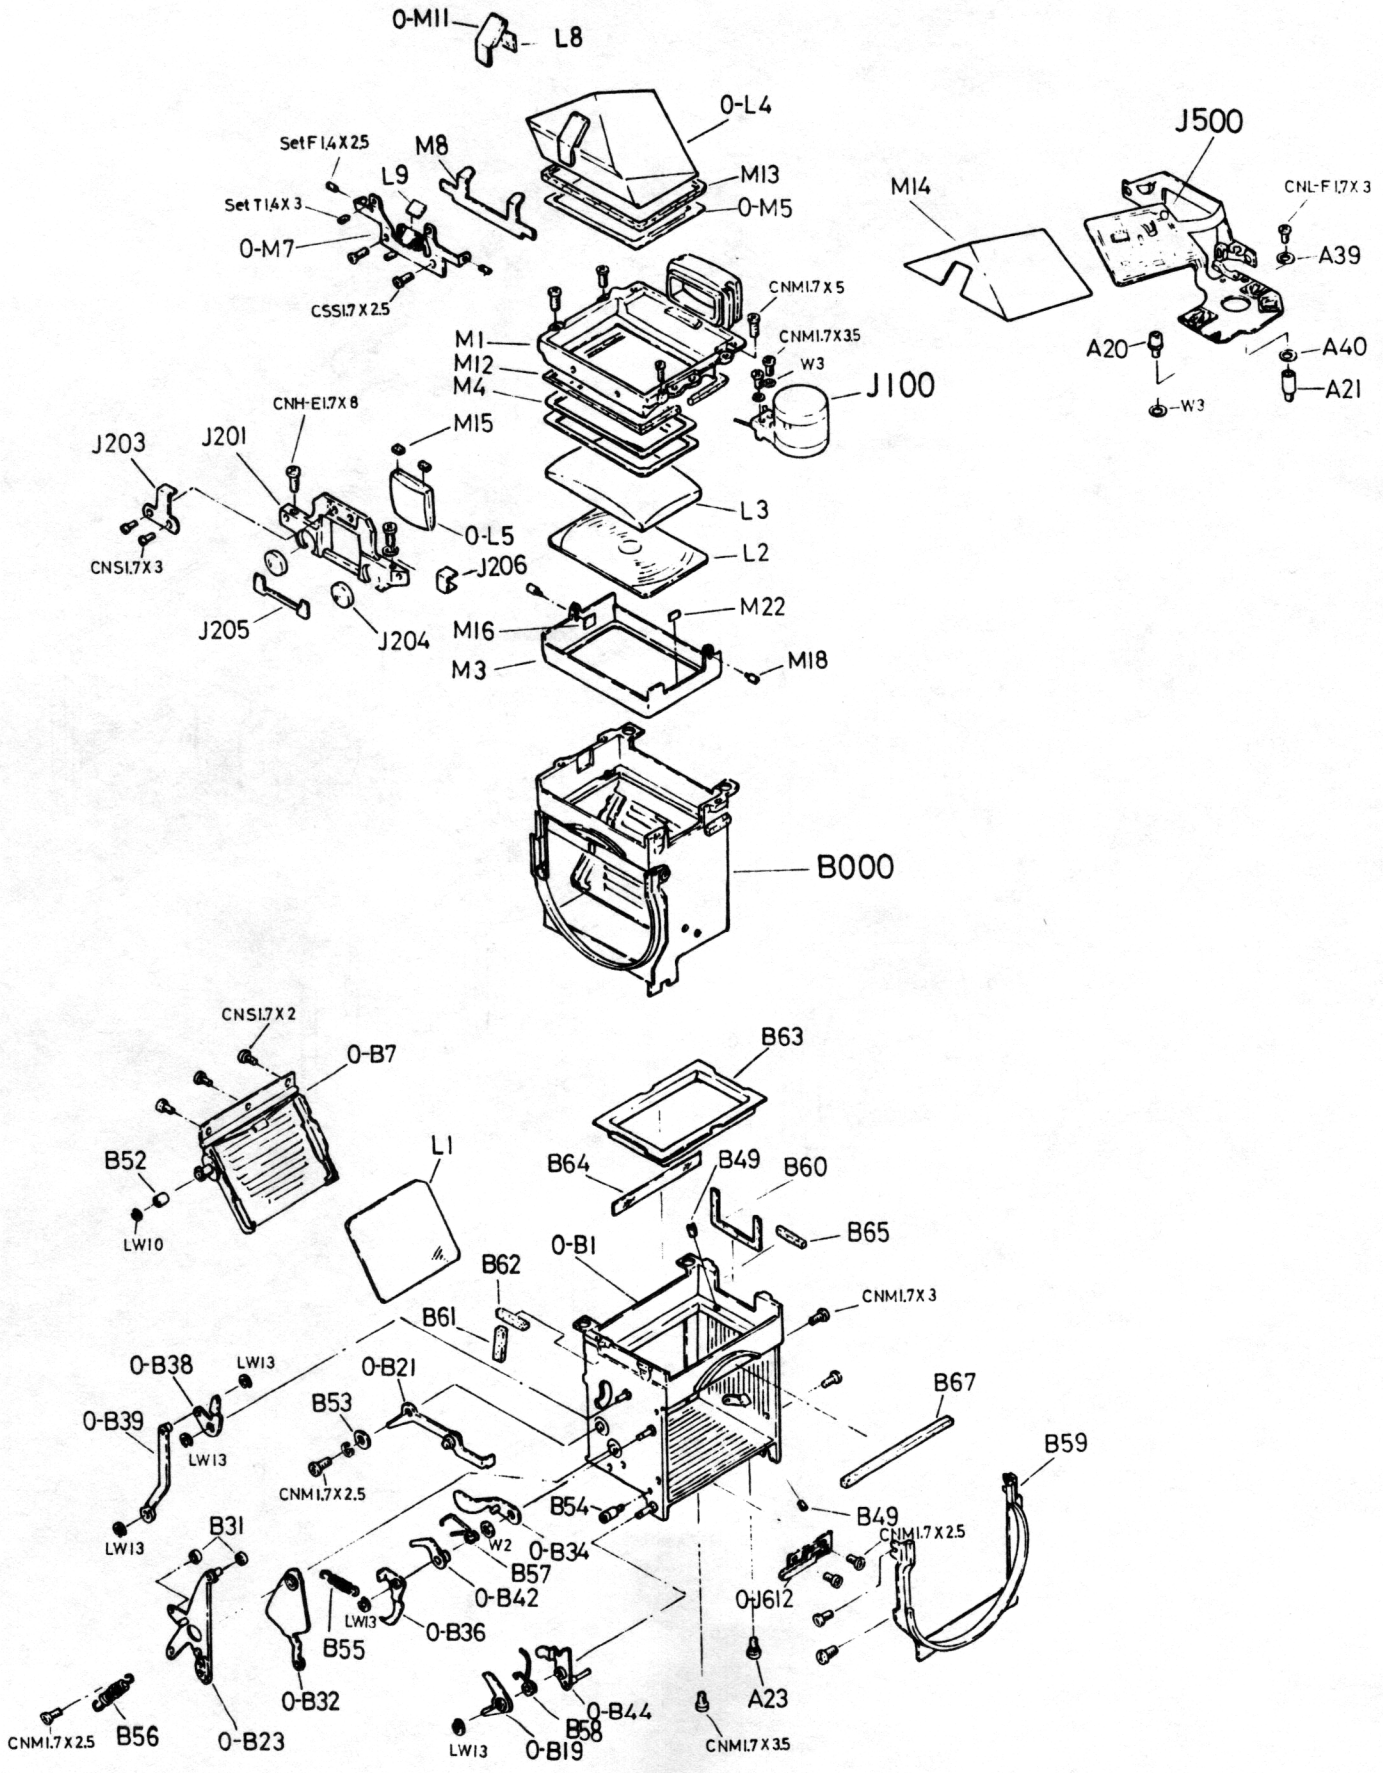


Fig. 2

Product No. 23700

ASAHI PENTAX KX

EXPLODED ILLUSTRATION

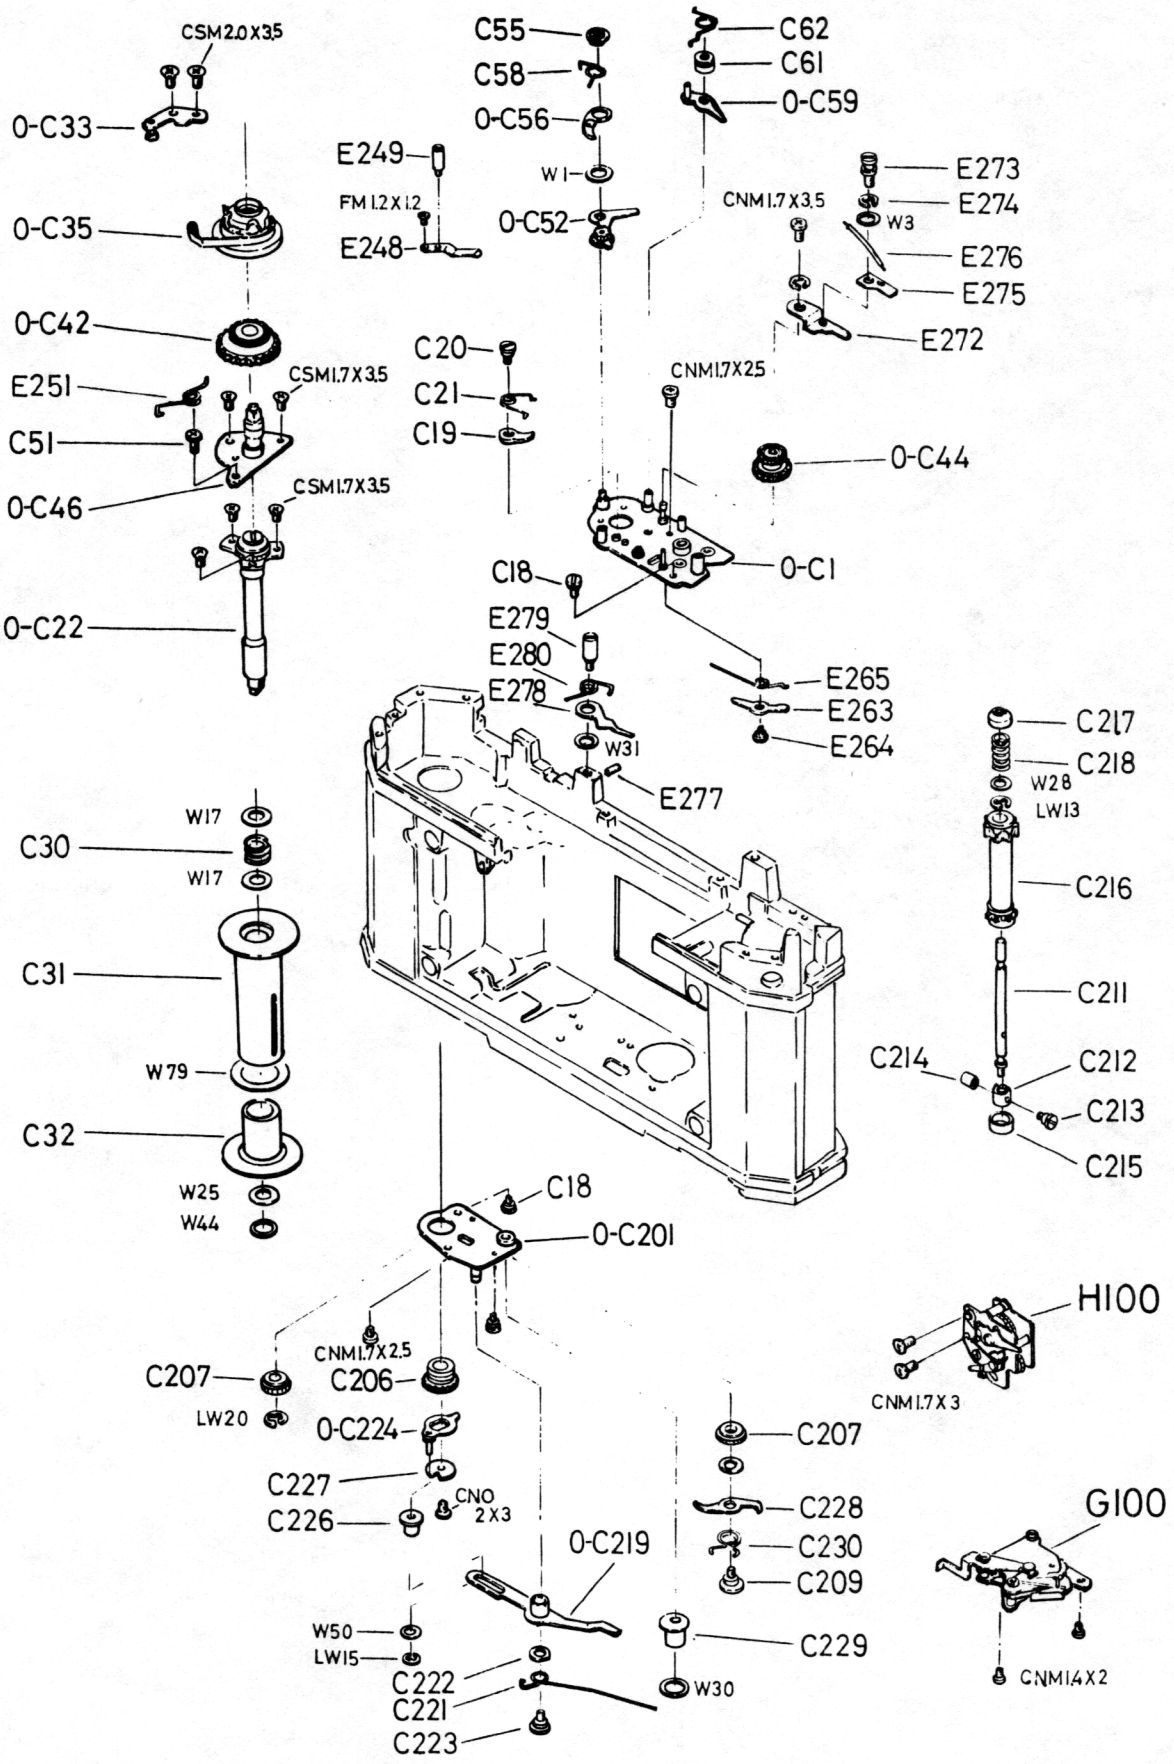


Product No. 23700

ASAHI PENTAX KX

Fig. 3

EXPLODED ILLUSTRATION

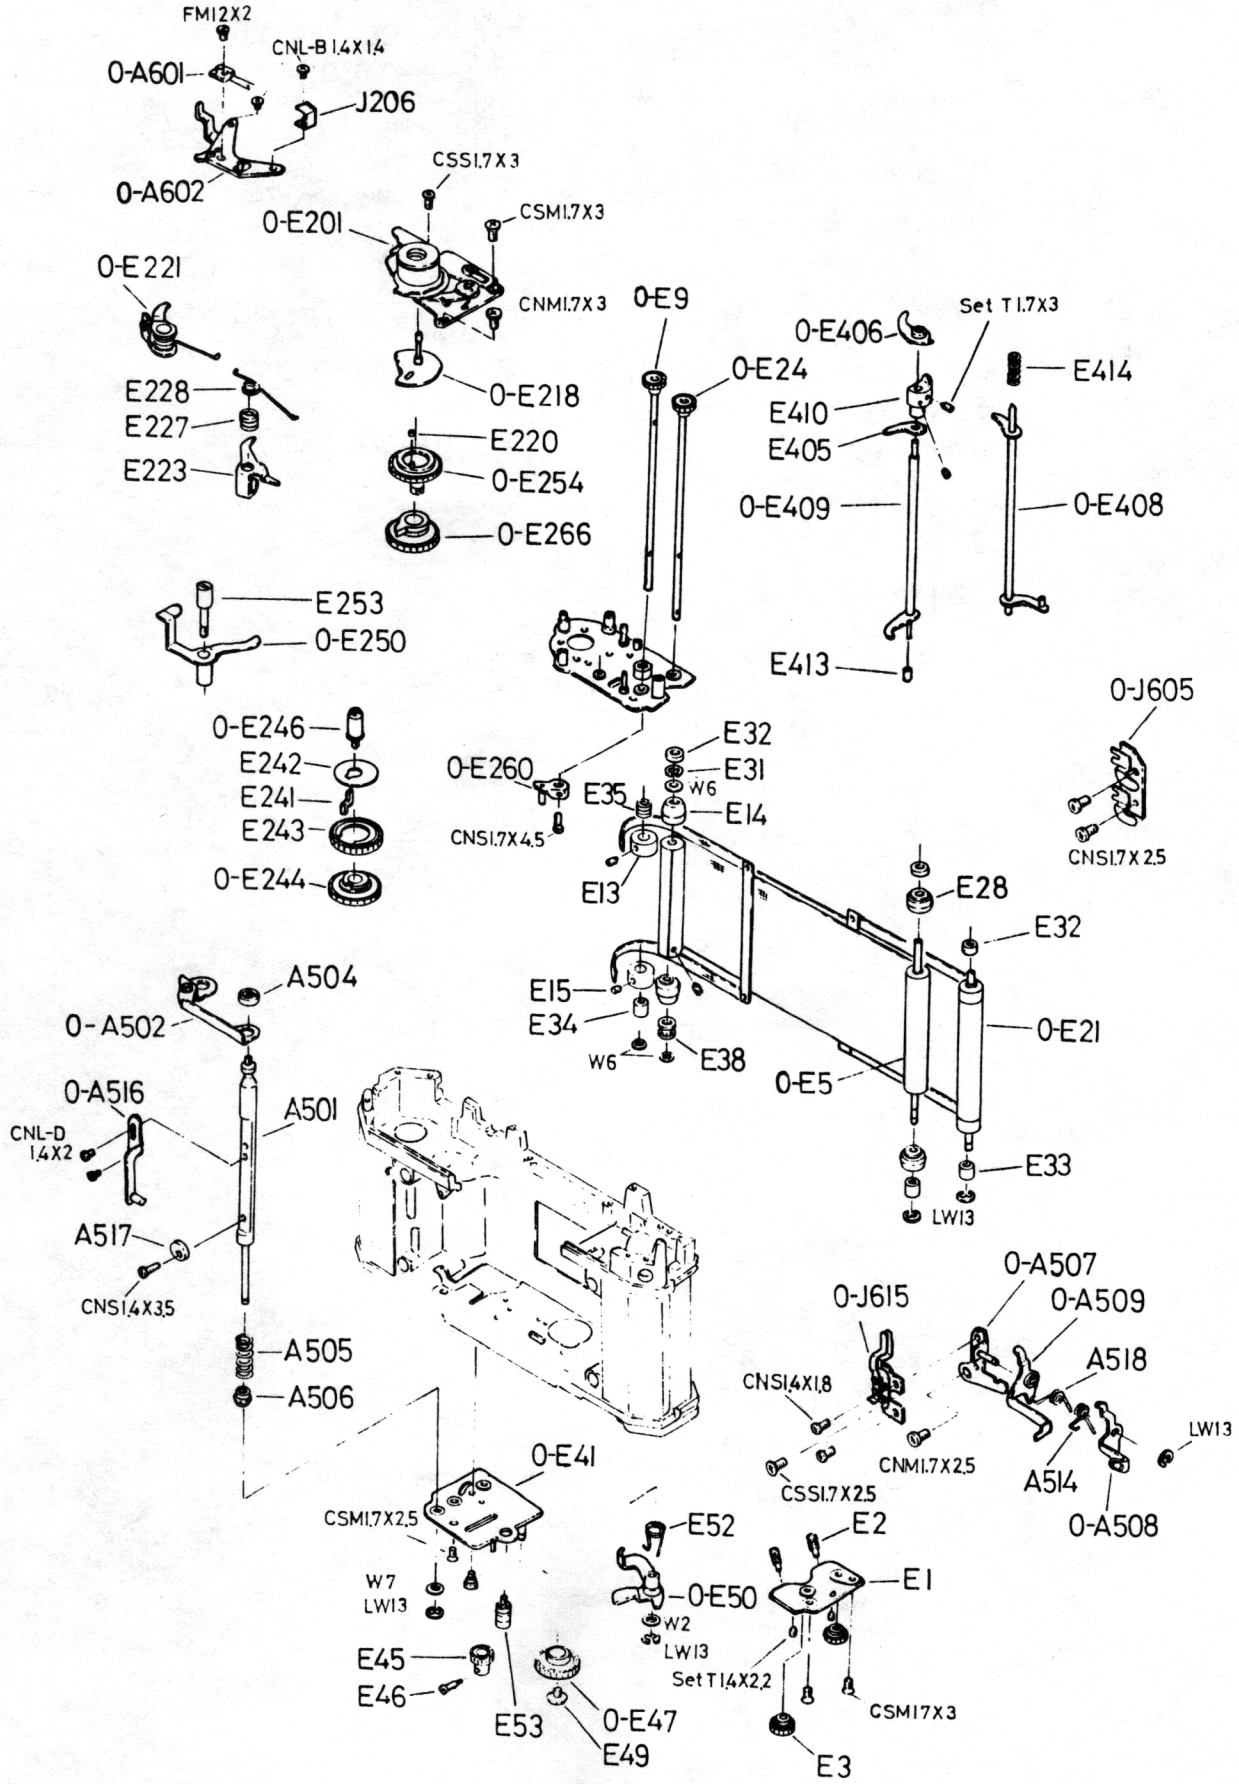



Product No. 23700

ASAHI PENTAX KX

Fig. 4

DISTRIBUTING WIRES

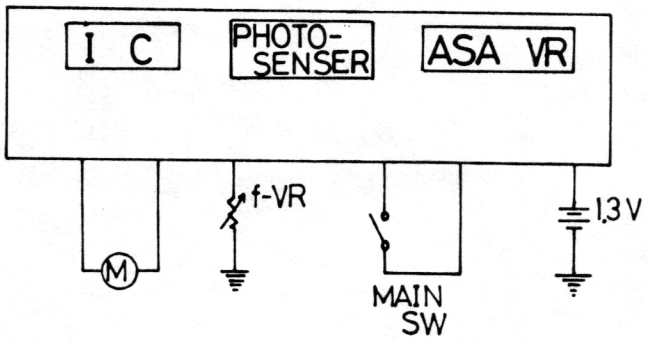

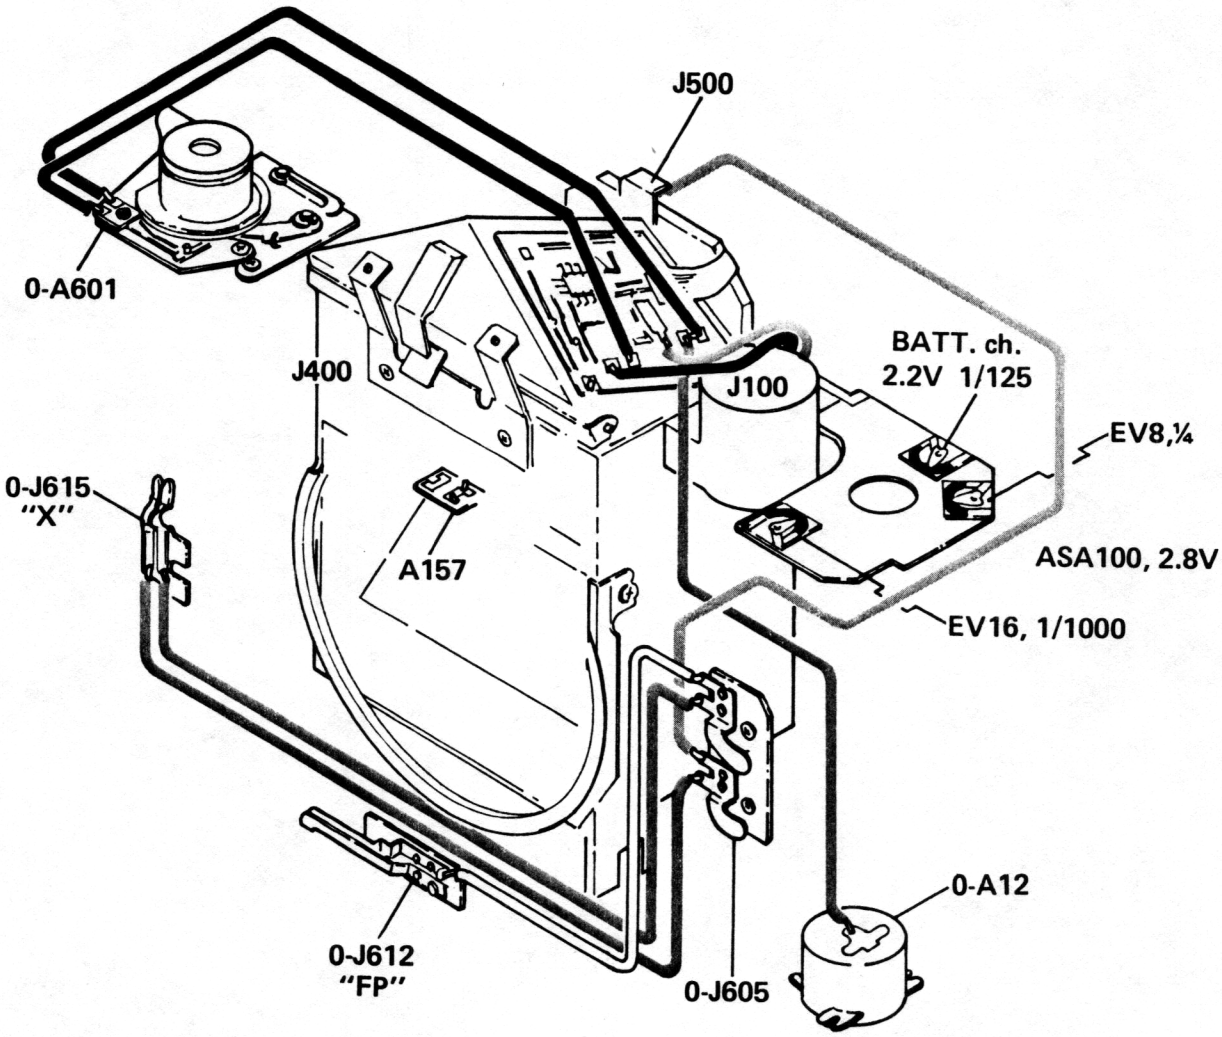

Product No. 23700

ASAHI PENTAX KX

Fig. 5

LIST OF SERVICE PARTS

Product No. 23700
ASAHI PENTAX KX

Note: 1. The parts with numbers starting '0-' are assemblies.

2. Only available parts are listed below.

Parts No.	Description	Quantity	Interchangeability
A1	Body proper	1	
A2	Hinge A	1	23110-A8
A3	Hinge collar	2	23110-A44
A4	Hinge retainer plate	1	23110-A9-01
A5	Hinge release plate	1	
A6	Hinge retainer spring	1	23110-A20
0-A7	Cassette receptacle assembly (A7, A8, A9, A10, A11)	1	23110-0-A16
0-A12	Battery seat assembly (A12, A13, A14)	1	
A15	Tripod seat	1	
A16	Light seal curtain	1	23110-A132
0-A17	Strap hook assembly (A17, A18)	1	23602-0-A17
A19	Strap hook retainer screw	1	23110-A54
A20	Top cover install shaft	1	
A21	P. C. board install shaft	1	
A22	Mirror housing retainer screw A	2	23110-B53
A23	" B	1	23110-B121
A24	Shutter curtain restriction plate	1	

Parts No.	Description	Quantity	Interchangeability
A25	Light seal string A	1	23110-A82
A26	" B	1	23110-A83
A27	" C	1	23110-A84
A28	Light seal cloth	1	23110-A60
A29	Body covering, left	1	
A30	" , right	1	
0-A31	Meter coupling plate assembly (A31, A32)	1	
0-A33	Meter coupling actuator plate assembly (A33, A34, A35, A41, A42)	1	
A36	Coupling plate retainer screw	1	
A37	Coupling plate spring	1	
A38	P. C. board retainer collar A	1	
A39	" B	1	
A40	" C	1	
A100	Front board complete assembly (A101∼A164)	1	
A101	Front board	1	
A102	Front cover plate	1	
0-A103	Cover frame assembly (A103, A160, L7, L11)	1	
A104	Mount	1	
A105	Mount spring	1	

Parts No.	Description	Quantity	Interchangeagility
A106	Mount retainer screw	6	23602-A106
A108	Mount lock spring	1	
0-A110	Mount lock button assembly (A110, A107, A111)	1	
A113	Mount lock pin	1	23602-A113
A114	Front board adjusting nut	4	23110-A109
A115	"	1	23110-A110
A116	Front board adjusting collar	4	23110-A111
A117	"	1	23110-A112
A120	Front board light seal string	1	23110-A81
A121	Mirror-up hook plate	1	
A122	Mirror-up actuator plate	1	
0-A123	Mirror-up button collar assembly (A123, A127, A131)	1	
0-A124	Mirror-up button receptacle assembly (A124, A130, A138, A139)	1	
A125	Stop-down button seat	1	
A126	Stop-down button	1	
A128	Stop-down button screw	1	
A129	Click spring pin	1	
A132	Mirror-up button retainer screw	1	
A133	Mirror-up actuator plate retainer screw	1	
A134	Mirror-up hook ring	1	
A135	Mirror-up click spring	1	
A136	Stop-down button spring	1	

Parts No.	Description	Quantity	Interchangeability
A137	Mirror-up hook plate spring	1	
A140	Joint	1	23117-H38
0-A141	Release ring assembly (A141, A152)	1	
A142	Front board install ring	1	
0-A143	Self-timer shaft supporter ring assembly (A143, A151)	1	23117-0-H43
A144	Stopper plate	1	23117-H44
A145	Friction spring	1	23117-H45
0-A146	Charge lever assembly (A146, A149, A154, A155)	1	
A147	Click spring	1	23117-H47
A148	Charge lever shaft	1	23117-H48
A150	Charge lever retainer screw	1	23117-H50
A156	f-volume retainer plate screw	2	
A157	Relay P.C. board	1	
A159	Adhesive tape	1	
A162	Front board light seal string	2	
A163	Light seal string D	1	
A164	" E	1	

Parts No.	Description	Quantity	Interchangeability
A200	Back cover assembly (A201, A202, A203, A204, A205, A206 x2, A207, A208 x2, A209, A210 x4, A211, A212, A213 x2, A214, A215, A216 x4, A217, A218, A219, A220, A221, A222 x4)	1	
0-A204	Pressure plate assembly (A204, A205, A206 x2)	1	
A220	Pressure plate cover	1	23110-A115
A300	Top cover assembly (A301~ A332)	1	
A302	Accessary shoe	1	
A303	Accessary shoe spring	1	23110-A63
0-A304	Accessary shoe seat assembly (A304, A305)	1	
0-A306	Contact spring (A306, J608)	1	23110-A65
A307	Indication plate	1	23602-A331
A308	Shutter button seat	1	
A309	Shutter button	1	
0-A310	Shutter button core assembly (A310, A319)	1	
A311	Spring retainer screw	1	23110-A46
A313	B. C. button	1	23110-A94
A314	B. C. button spring	1	23110-A95
A315	Shutter button install ring	1	23110-A62
A316	Guide screw	1	23110-A71

Parts No.	Description	Quantity	Interchangeability
A317	Shutter button seat spring	1	23110-A72
A320	Shutter button retainer spring	1	23110-A55
A321	Cover ring	1	
A322	Cocked indicator window	1	23110-A59-01
A323	Insulation collar	1	
A324	Light seal curtain	1	23110-A122
A325	Shoe contact spring retainer screw	1	23602-A328
0-A326	Switch spring assembly (A326, J609)	1	23110-A118
A327	Insulation washer	1	23110-A119
A328	Switch pin	2	23110-A120
A329	Protector retainer	1	
A330	Stroke adjust washer	1	
A332	Eyepiece light seal cushion	1	23110-A78
A400	Bottom cover assembly (A401, A402)	1	
0-A403	Battery cap assembly (A403, A404)	1	23602-0-A40
A405	Scratch prevention case	1	
A501	Shutter rod	1	
0-A502	Release plate assembly (A502, A611)	1	
A504	Release plate nut	1	23110-E137
A505	Shutter rod spring	1	23117-E117-02

Parts No.	Description	Quantity	Interchangeability
A506	Shutter rod spring guide collar	1	23110-E148
0-A507	Mirror-up lever seat plate assembly (A507, A510)	1	
0-A508	Mirror-up actuator lever assembly (A508, A512, A513)	1	
0-A509	Stop-down actuator lever assembly (A509, A511)	1	
A514	Mirror-up actuator lever spring	1	
0-A516	Shutter actuator plate assembly (A516, A515)	1	
A517	Eccentric collar	1	23117-E106
A518	Stop-down actuator lever spring	1	
0-A601	Main switch assembly (A601, A612)	1	
0-A602	Main SW seat assembly (A602∼A610)	1	
B000	Mirror housing complate assembly (B1∼B69)	1	
0-B1	Mirror housing assembly (B1, B2, B3, B4, B5, B6)	1	
0-B7	Mirror seat assembly (B7, B8 x4, B9, B10 x2, B11, B12, B13, B14, B15, B16 x2, B17, B18 x2, LW10)	1	
0-B19	Hook lever assembly (B19, B20)	1	
0-B21	Diaphragm lever assembly (B21, B22, B66)	1	

Parts No.	Description	Quantity	Interchangeability
0-B23	Mirror actuator lever, top assembly (B23, B24 x2, B25, B26, B27 x2, B29, B33, B68)	1	
B31	Roller A	2	
0-B32	Mirror actuator lever, bottom assembly (B32, B33)	1	
0-B34	Mirror actuator plate assembly (B34, B35)	1	
0-B36	Stopping lever assembly (B36, B37)	1	
0-B38	Curtain actuator lever assembly (B38, B40)	1	
0-B39	Connecting lever assembly (B39, B30)	1	
0-B42	Mirror-up lever assembly (B42, B43)	1	
0-B44	FP lever assembly (B44, B45, B46)	1	
B49	Focus adjusting screw	3	23110-B49
B52	Mirror seat roller	1	23110-B123
B53	Mirror actuator lever stopper	1	
B54	Hook plate spring hanger screw	1	
B55	Mirror seat spring	1	
B56	Diaphragm spring	1	
B57	Mirror-up spring	1	
B58	Hook plate spring	1	
B59	Light seal frame	1	

Parts No.	Description	Quantity	Interchangeability
B60	Dust prevention spring A	1	
B61	" B	1	
B62	" C	1	
B63	Ground glass frame B	1	
B64	Light seal curtain	1	
B65	Dust prevention string D	1	
B67	Light seal plate	1	
0-C1	Top mec. plate assembly (C1～C17)	1	23110-0-C1
C18	Top mec. plate retainer screw	4	23110-C72-01
C19	Non-return arm	1	23110-C8
C20	Non-return arm screw	1	23110-C74
C21	" spring	1	23110-C88
0-C22	Wind up shaft assembly (C22～C29)	1	23110-0-C42
C30	Spool spring	1	23110-C86
C31	Top take-up spool brim	1	23110-C10
C32	Bottom take-up spool brim	1	23110-C11
0-C33	Lever stopper assembly (C33, C34)	1	
0-C35	Rapid wind lever seat assembly (C35～C41)	1	

Parts No.	Description	Quantity	Interchangeability
0-C42	Top 1st gear assembly (C42, C43)	1	23110-0-C22
0-C44	Top 2nd gear assembly (C44, C45)	1	23110-0-C24
0-C46	Rapid wind lever shaft assembly (C46∼C50)	1	23110-0-C39
C51	Rapid wind lever shaft retainer screw	1	23110-C73
0-C52	Counter dial coupler lever assembly (C52, C53, C54)	1	23110-0-C17
C55	Counter dial coupler lever collar	1	23110-C63
0-C56 (A∼C)	Counter dial retchet assembly (C56, C57)	1	23110-0-C19 (A∼C)
C58	Counter dial retchet spring	1	23110-C82
0-C59	Counter dial actuator lever assembly (C59, C60)	1	23110-0-C18
C61	Counter dial actuator lever collar	1	23110-C60
C62	Counter dial actuator lever spring	1	23110-C83
0-C201	Bottom mec. plate assembly (C201, C202, C203, C204, C205, C208, C210)	1	23110-0-C2
C206	Bottom main gear	1	23110-C27-02
C207	Idling gear	2	23110-C28-01
C209	Idling gear retainer screw	1	23110-C52
C211	Sprocket shaft	1	23110-C54-03
C212	Clutch ring	1	23110-C95-01

Parts No.	Description	Quantity	Interchangeability
C213	Clutch ring retainer screw	1	23110-C107-02
C214	" collar	1	23110-C110-01
C215	Sprocket retainer	1	23110-C109
C216	Sprocket	1	23110-C57-04
C217	Sprocket collar	1	23110-C58
C218	Sprocket spring	1	23110-C89
0-C219	Coupler lever assembly (C219, C220)	1	23110-0-C13-01
C221	Mirror restitution spring	1	23110-B66-03
C222	Coupler lever washer	1	23110-C15
C223	Caupler lever retainer screw	1	23110-C49-01
0-C224 (A∼E)	Caupler lever pin adjust seat assembly (C224, C225)	1	23110-0-C12 (A∼E)
C226	Coupler pin collar	1	23110-C105
C227	Pin rest retainer plate	1	23110-C96
C228	Rewind actuator lever	1	23110-C56-02
C229	R button	1	23110-C56-02
C230	Rewind actuator lever spring	1	23110-C87
0-C301	Wind lever assembly (C301, C302, C304, C305, C308, CSM1.4x3.5)	1	
C302	Wind lever cover	1	
C306	Wind lever retainer plate	1	
C307	Pre-advance angle spring	1	

Parts No.	Description	Quantity	Interchangeability
C309	Counter dial housing	1	23110-C69
C310	Wind lever shaft nut	1	23110-C75-01
C311	Counter dial retainer screw	1	23110-C70
0-C312	Counter dial covering assembly (C312, C313, Set T1. 4x1. 8 x3)	1	
0-C314	Counter dial assembly (C314, C315)	1	23110-0-C20
0-D1	Rewind knob assembly (D1∼D6)	1	23110-0-D8-03
0-D7	ASA selector ring assembly (D7, D8, D9, D18, D19, D20, D21, D22 x2, D23 x2, D24 x2)	1	
0-D10	Shaft receptacle assembly (D10, D11, D16)	1	
D12	Light seal plate	1	
0-D13	Rewind shaft assembly (D13, D14, D15)	1	
D17	Nut	1	
0-D25	Slider assembly (D25, D26)	1	
E1	Curtain shaft seat	1	23110-E1
E2	Worm	2	23110-E41-01

Parts No.	Description	Quantity	Interchangeability
E3	Worm wheel	2	23110-E40
0-E5	1st curtain assembly (E5, E6 x2, E7, E8, E11, E12, E22 x2, E36, E37)	1	23110-0-E128
0-E9	1st curtain pinion shaft assembly (E9, E10)	1	23110-0-E61
E13	1st curtain shaft	2	23110-E66
E14	1st curtain roller	2	23110-E67
E15	Pinion shaft retainer screw	3	23110-E102
0-E21	2nd curtain shaft assembly (E21, E7, E22 x2, E23, E25, E26, E27, E28, E29, E36, E37)	1	23110-0-E129
0-E24	2nd curtain pinion shaft assembly (E24, E10)	1	23110-0-E62-01
E28	2nd curtain roller	2	23110-E68
E31	E clip	2	23110-E167
E32	Curtain shaft collar A	3	23110-E73
E33	" B	2	23110-E74
E34	" C	1	23110-E75
E35	" D	1	23110-E76-01
E38 (A~B)	" E	1	23110-E169 (A~B)
0-E41	Bottom shaft rest assembly (E41, E42, E43)	1	23110-0-E3

Parts No.	Description	Quantity	Interchangeability
E45	Coupler pinion	1	23110-E39
E46	Coupler pinion screw	1	23110-E112
0-E47	Coupler gear assembly (E47, E48)	1	23110-0-E37
E49	Coupler gear retainer screw	1	23110-E105-02
0-E50	Pinion coupler lever assembly (E50, E51)	1	23110-0-E9-01
E52	Pinion coupler lever spring	1	23110-E121
E53	Coupler lever spring hanger	1	23110-E96-01
0-E201	Shutter seat assembly (E201∼E217, E240, E401, E402, E412, E413, E415, E416, E417)	1	
E210	Cam lever	1	
0-E218 (A∼C)	High speed cam assembly (E218, E219)	1	23110-0-E19 (A∼C)
E220	Selector pin collar	1	23110-E132
0-E221	High speed lever assembly (E221, E222, E224, E225, E226, E229, E230, Set F1. 4x2. 5)	1	23110-0-E6
E223	Bulb lever	1	23110-E7
E227	Bulb lever nut	1	
E228	" spring	1	23110-E119
0-E234	Speed dial assembly (E234, E281)	1	
E241	Spill	1	23110-E30

Parts No.	Description	Quantity	Interchangeability
E242	Spill receptacle plate	1	23110-E32
E243	Top intermediate gear	1	23110-E33
0-E244	Bottom intermediate gear assembly (E244, E245)	1	23110-0-E34
0-E246	Intermediate gear retainer screw assembly (E246, E247)	1	
E248	Spill spring	1	23110-E31
E249	Spill spring retainer screw	1	23110-E110
0-E250	Cocked indicator assembly (E250, E252)	1	23110-0-E29
E251	Cocked indicator spring	1	23110-C79
E253	" screw	1	
0-E254	Top selector gear assembly (E254~E259)	1	23110-0-E35-01
0-E260	Speed selector retainer assembly (E260~E262)	1	23110-0-E45
E263	1st curtain checker arm	1	23110-E8
E264	1st " screw	1	23110-E95
E265	1st " spring	1	23110-E118
0-E266	Bottom selector gear assembly (E266~E271)	1	23110-0-E36
E272	Stopper	1	23110-C7
E273	Stopper retainer screw	1	23110-C91
E274	Stopper washer	3	23110-C92
E275	Tube retainer	1	23110-E163
E276	Lubrication tube	1	23110-E164

Parts No.	Description	Quantity	Interchangeability
E277	Bounce stopper adjust screw	1	23110-E109
E278	" plate	1	
E279	" retainer screw	1	23110-E101
E280	" spring	1	23110-E123
E405	Pallet release lever top A	1	23110-F5
0-E406	" B assembly (E406, E417)	1	23110-0-F6
0-E408	Governor actuator rod assembly (E408, E403, E404, E411)	1	23110-0-F8
0-E409	Pallet release rod assembly (E409, E407)	1	23110-0-F9
E410	Pallet release lever collar	1	23110-F10
E413	Pallet release rod collar	1	23110-F14
E414	Governor actuator rod spring	1	23110-F15
G100	Slow governor	1	
H100	Self timer	1	23117-0-H1
J100	Galvanometer	1	
J201	Cell frame	1	
J203	Shoe contact	1	

Parts No.	Description	Quantity	Interchangeability
J204	Collection lens	2	23602-N18
J205	Cell mask	1	
J206	Cord holder	2	
J207	Lug plate	1	
J400	f-volume assembly (J401~J413)	1	
0-J401	f-volume retainer plate assembly (J401, J410, J411)	1	
J402	f-volume	1	
0-J404	Diaphragm coupler ring assembly (J404, J405, J406 x2, J408, J409 x2, J413)	1	
J500	Electro parts (J550, J202 x2, J300)	1	
0-J601	Synchro terminal assembly (J601~J603)	2	23602-0-A40
J604	Synchro terminal nut	2	
0-J605	Terminal contact seat assembly (J605, J606 x2, J607 x4)	1	
0-J612	FP contact seat assembly (J612, J608, J609, J610, J611, J617 x3)	1	
0-J615	X contact seat assembly (J615, J608, J609, J613, J614, J616, J617 x2, J618, J619 x2)	1	

Parts No.	Description	Quantity	Interchangeability
L1	Mirror	1	23110-L1
L2	Fresnel lens	1	23110-L2
L3	Ground glass	1	23110-L3
0-L4	Pentaprism assembly (L4, L9, L10, M8, M11, M23, M24)	1	
0-L5	Eyepiece assembly (L5, L6)	1	23602-0-L5
L8	Mini mirror	1	
L9	Mini mirror	1	
M1	Prism seat	1	
M3	Ground glass frame	1	23117-M3
M4	" retainer	2	23110-M4
0-M5	" mask assembly (M5, M6, M21)	1	
0-M7	Prism retainer plate assembly (M7, M10, M20 x2, L8)	1	
0-M11	Mirror holder assembly (M11, L9)	1	
M12	Dust prevention string B	1	
M13	" C	1	
M14	Prism protector	1	
M15	Cushion	2	
M16	Dust prevention tape	4	
M18	Ground glass frame retainer screw	2	23110-M18
M19	Dust prevention string A	1	23110-M19
M22	Center adjust washer	1	

LIST OF STANDARD PARTS

Product No. 23700
ASAHI PENTAX KX

Small screws:

Description	Surface treatment	Position of use	Quantity
FM1.2 x 1.2	Nickel	E248, C1	1
FM1.2 x 2.5	"	A601, A602	1
Set T1.4 x 1.8	Black nickel	C312, C309	1
Set T1.4 x 2.2	"	E1, E2	2
Set T1.4 x 3.0	"	M7, M8	2
Set T1.7 x 2.5	"	E410, E409	2
Set T1.7 x 3.0	"	E234, E240	3
Set F1.4 x 2.5	"	M7, M8 E226, E402 E226, E222	2 1 1
Set F1.7 x 4.0	"	A1	1
CNS1.4 x 1.5	"	A142, A143 A31, A41	3 2
CNS1.4 x 2.0	"	M7, M10	2
CNS1.4 x 2.8	"	E260, E254	1
CNS1.4 x 4.5	"	M1, B1	1
CNS1.7 x 1.5	"	A24, A1	2
CNS1.7 x 2.0	"	B7, B1	3
CNS1.7 x 3.0	"	D6, D11	2
CNS1.7 x 3.5	"	J100, M1	2
CNS1.4 x 1.8	"	J615, A507	2
CNS1.4 x 3.5 (Left)	"	A517, A508	1

Description	Surface treatment	Position of use	Quantity
CNM1.4 x 1.6	Black nickel	D6, D11	2
CNM1.4 x 2.0	"	G100, A1	2
CNM1.7 x 2.5	"	C201, A1	1
		A507, A1	1
		A12, A1	3
		A6, A1	2
		J612, B1	2
		B23, B2	1
		B53, B3	1
CNM1.7 x 3.0	"	J400, A1	2
		A7, A1	2
		D10, A1	3
		A7, A11, A1	2
		E201, C8	1
		B59, B1	4
CNM1.7 x 3.5	"	E272, C6	1
		J501, J201	2
CNM1.7 x 4.0	"	E211, E240	1
CNM1.7 x 5.0	"	M1, B1	3
CSS1.4 x 1.6	"	A301, A315	3
		A142, A1	3
		A123, A125	3
CSS1.4 x 2.5	"	A124, A1	3
CSS1.4 x 3.0	"	A146, A154	1
CSS1.7 x 2.0	"	A3, A4, A1	2
CSS1.7 x 2.2	"	A2, A5	2
	Nickel	A401, A15	1
CSS1.5 x 2.5	Black nickel	B47, B1	2
		A507, A1	
		A202, A1	4
		B48, B1	2
		M7, M1	2
CSS1.7 x 2.8	Nickel	A301, A1	2
CSS1.7 x 3.0	Black nickel	E201, A1	2

Description	Surface treatment	Posotion of use	Quantity
CSS1.7 x 3.2	Black nickel	A4, A1	2
CSS1.7 x 3.5	"	A15, A1	2
CSS1.7 x 4.0	"	A302, A301	2
CSS1.7 x 6.0	"	A17, A1	2
CSS1.7 x 7.0	"	A302, A301	2
CSS2.0 x 3.0	Nickel	A401, A1	2
		A301, C33	1
CSS1.4 x 1.8	Black nickel	E211, E206	2
CSM1.4 x 1.8	"	E201, E202	3
CSM1.4 x 3.5	"	E213, E240	2
		C301, C302	1
CSM1.7 x 2.5	"	E41, A1	2
CSM1.7 x 3.0	"	E1, A1	2
		E201, A1	1
		H100, A1	2
CSM1.7 x 3.5	"	A15, A1	2
		C46, C10	1
		C46, C9	1
		C23, A1	3
CSM2.0 x 3.5	"	A33, A1	2
CNL-B1.4 x 1.4	"	A602, E201	2
CNL-D1.4 x 2.0	"	A516, A501	2
CNL-D1.7 x 2.0	"	C306, C301	1
		C307, C301	2
CNL-E1.7 x 8.0	"	J501, M1	2
CNL-F1.7 x 3.0	"	J500, A1	1
CNO 2.0 x 3.2	"	C227, C206	1
		A101, A1	4
CNST1.4 x 5.0	"	M1, B1	1

Description	Surface treatment	Position of use	Quantity
CNST1.7 x 3.0	Black nickel	J203, J201	2
		A101, A1	1

Washers:

Description	Material	Thickness	Position of use	Quantity
W1	Steel	0.1mm	C52, C53	1
W2	Phospher bronze	0.1, 0.15	B20, B46	1
		0.05	E43, E50	1
W3	"	0.05~0.2	E210, E205	1
			E210, E204	1
		0.2	J100, M1	2
			J201, J501	1
			E272, E274	1
		0.4	J201, J501	1
		0.5	A21, J300	1
			A20, J300, A1	1
			A603, A610	1
			A127	1
	Steel	0.5	A36, A31, A1	1
	Phospher bronze	0.7	E210, E205	1
			E210, E204	1
W4	"	0.1	C52, C54	1
W6	Steel	0.02~0.03	B34, B63	1
			E263, E264	1
		0.1~0.2	E34, E41	1
			E14, E31	1
			E31, E32	1
W7	Phospher bronze	0.7	A501	1
W8	"	0.2	C9, C55	1
W9	Brass	0.4	C205, C209	1
W15	Phospher bronze	0.05~0.15	B25, B32	1
W17	Steel	0.2	C30, C31	1
			C22, C30	1

Description	Material	Thickness	Position of use	Quantity
W25	Plastic	0.4	G32, C206	1
W27	Phospher bronze	0.5	A122, A123	1
		0.05	E204, E401	1
		0.02~0.05	E27, E279	1
		0.01~0.15	E401, E412	1
W28	Steel	0.4	C211	1
W30	Celluloid	0.4	C229, A401	1
W31	Steel	0.4	E278, A1	1
W44	Phospher bronze	0.2	C206	1
W50	"	0.4	C225	1
W71	"	0.05~0.1	E211, E240	1
W79	"	0.03	C32	1
W4.0 x 5.5	"	0.05~0.2	E202, E240	1

Lock washers:

Description	Position of use	Quantity
LW10	B11	1
LW13	A501, A510, B5, B6, B22, B30, B31, B68, E8, E23, E43, E204, E205, E214, C211	Each 1
LW20	C204	1

Balls:

Description	Material	Diameter	Position of use	Quantity
BO1.2	Steel	1.2mm	A125	1
			A308	1

Lead wires:

Lead wire No.	Length	Color	Position of use	Quantity
1	100mm	Red	A13, J500	1
2	115	Blue	A612, J500	1
3	125	"	A612, J500	1
4	80	Yellow	A157, J500	1
5	60	White	J611, J606	1
6	95	Grey	J203, J606	1
7	200	Red	J613, J606	1
8	190	"	J614, J606	1